


New solution and price!  
**Formulating and Mixing**  
for  
Flexo - Serigraphy - Offset  
Ink - Paint - Ceramics - Cosmetics




## Miniature Spectrocam® for measuring colors

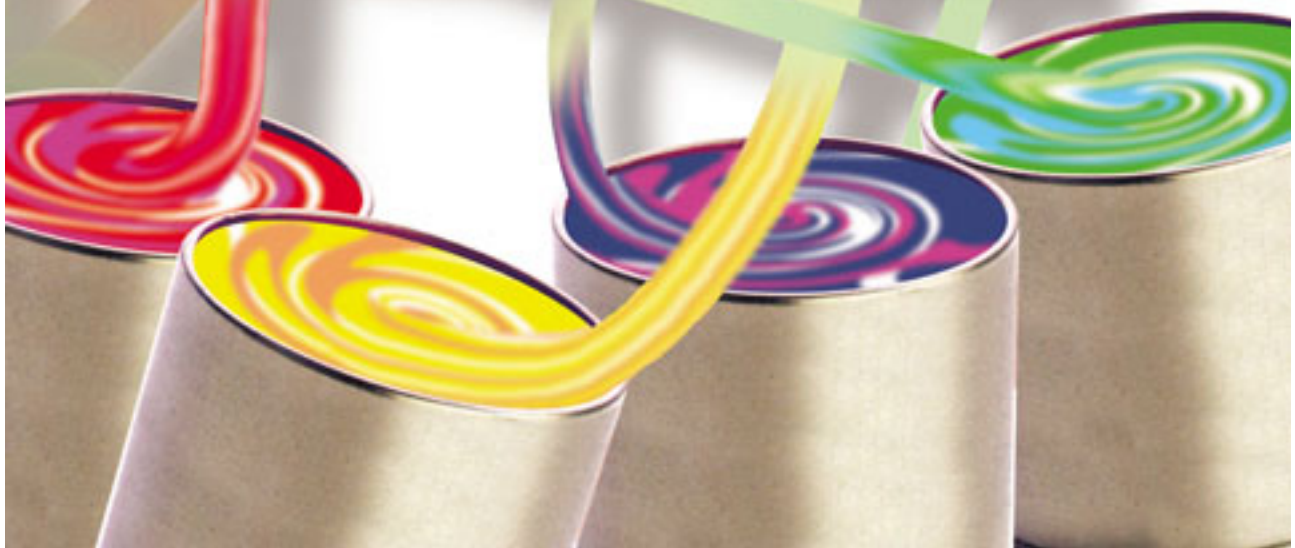

The Spectrocam combines the accuracy of a high-end spectrophotometer and new low cost technology. The Spectrocam can measure colors and densities of printed and painted materials with different kinds of surfaces from paper up to fine woven fabrics. The Spectrocam features a Xenon daylight flash. Xenon enables you to measure fast, more accurate and measures fluorescence exactly as it observed in real daylight. By moving the Spectrocam across one patch during just two seconds, the 70x high speed flashes will be averaged in one single spot measurement.

## Easy Match® Auto software for color formulation.

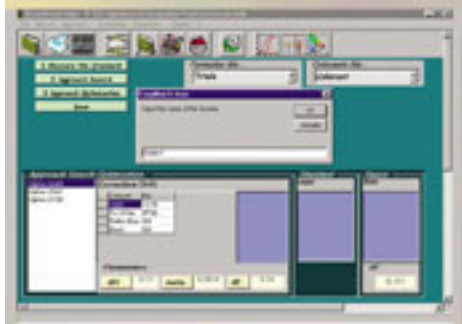

Easy Match Auto is very easy to use and allows Mixers to work with low-cost and accurate formulation software. The software includes a correction module to guarantee the final formula as accurate as possible. After measuring the hue to reproduce you can use an existing color library and the software will sort all hues with regard to your standard library and displays the 10 closest matches after you can start the optimizing process.

## Panta Color™ software for controlling the balancing process



Panta Color is a Interactive software package for easy control of balancing ink and paint receptures. Panta Color accepts the formula from Easy Match and will save the results and return the actual balancing results to Easy Match. This interactive method results in the right corrections.

The user interface helps the operator to easy understand the steps for the correct weight of ink and paint portions without the risk of making mistakes.

## CFA Carpentras. How to learn and understand Mixing and Proofing

Training in your company? Or training in our training facility at Carpentras "Centre Public de Formation". Consider this opportunity at our unique facility in France. A way from your production troubles to learn more about the world of Color, Mixing and Proofing. We show and let you work with the 2 software packages and formulate inks with speed and ease before making proofs on the new Panta proof unit. We teach you to creating less waste and more profits and communicate with color with the speed of the Internet. The Easy Match training arrangement includes a nice hotel for relaxing and brain curving.



Depending on your skill and experience you can book for 2,3 or 4 days.

## Strip Proofing

After the formulating and mixing it's important to check the results on the actual stock material. From practice we know that it is very significant to eliminate the time consuming proofing process and that cleaning the proofer is nobodies hobby. This new proofer is developed to deal with this problem and guarantees a smooth and quick change of colors. The construction allows you to test the colors and use different material to print on. The optional UV Drying unit guarantees quick measurement.



## Why should you buy the Easy Match® solution?

Our solution originated from production environment and is further developed based on daily practice. We are a strong and knowledgeable. Our dedicated team will support you and guarantees significant production improvements. We challenge you to compare our solution with others and be surprised by the low investment. Cut costs! Do not hesitate and ask for more information.



## Formulation and Mixing solution from Europe

Product	Description	Image
<b>Easy Match®</b>	<b>Easy Match® Pro</b> This software is a full laboratory and production software package for Quality Control, Color formulation and Correction, Colorant Characterisation.	
<b>Easy Match®</b>	<b>Easy Match® Auto</b> This software is a simplified version of <b>Easy Match®</b> for Ink and Paint Formulation applications, including Modules for Color Correction, Formulating and Building Libraries. <b>Easy Match® Plus</b> This software is <b>Easy Match® Basic</b> but with a Color Correction module (for small paint manufacturers). <b>Easy Match® Basic</b> This software is a stripped version of <b>Easy Match®</b> and needs a Library from the manufacturers. <b>QC package-Add on for Easy Match®.</b>	
<b>PantaColor™</b>	<b>Panta Xpress™</b> This software is a new, very user and price friendly package for controlling the ink or paint balance.	
<b>PantaBalance™</b>	<b>Sartorius™</b> Balancing a perfect Mix with interactive PantaColor.	
<b>PantaProof™</b>	<b>Euro strip proofing™</b> This proofing system is new and very easy to clean for changing sample inks.	
<b>Spectrocam®_NU</b>	<b>Miniature Spectrometer®</b> for Color Measurement, UV-filtered, incl. Accessories, software and power supply. Reads 400-750 NM.	
<b>Spectrocam®</b>	<b>Miniature Spectrometer®</b> for Color Measurement, incl. Accessories, Measurement software and power supply. Reads 380-750 NM.	

All information regarding prices, training, software and hardware modules are available by contacting [info@imagesware.com](mailto:info@imagesware.com) or phone +31 203632916

Solution by



**Simes Technologies**  
simes@wanadoo.fr  
Tel: +33 344074629 or +33 141 376 580



**ImagesWare**  
info@imagesware.com  
Tel: +31 200 832 916



**EUROGRAPHIE**  
meva@wanadoo.fr  
Tel: +33 662 826 476

CFA Carpentras Mr. J. Renou  
Centre Public de Formation  
Tel: +33 490 902 633

Your distributor

Lloyds Research Foundation, Inc  
India: 2/502, Sea Crest, 7 Bungalows,  
Versova Beach Road, Andheri (W).  
Mumbai 400061  
Tel: +91-22-634 3255. 634 0666  
Fax: +91-22-634 0666, 634 0187.  
Email: [sales@lloydsresearch.com](mailto:sales@lloydsresearch.com)  
Web Site: [www.lloydsresearch.com](http://www.lloydsresearch.com)